



Airfield Lighting
RELIANCE 8-inch Inset Light (TC-SB)

Spare Parts

SP-0212, Rev. 2.0, 2021/10/07



A.0 Disclaimer / Standard Warranty

CE certification

The equipment listed as CE certified means that the product complies with the essential requirements concerning safety and hygiene. The European directives that have been taken into consideration in the design are available on written request to ADB SAFEGATE.

ETL certification

The equipment listed as ETL certified means that the product complies with the essential requirements concerning safety and FAA Airfield regulations. The FAA directives that have been taken into consideration in the design are available on written request to ADB SAFEGATE.

All Products Guarantee

ADB SAFEGATE will correct by repair or replacement per the applicable guarantee above, at its option, equipment or parts which fail because of mechanical, electrical or physical defects, provided that the goods have been properly handled and stored prior to installation, properly installed and properly operated after installation, and provided further that Buyer gives ADB SAFEGATE written notice of such defects after delivery of the goods to Buyer. Refer to the Safety section for more information on Material Handling Precautions and Storage precautions that must be followed.

ADB SAFEGATE reserves the right to examine goods upon which a claim is made. Said goods must be presented in the same condition as when the defect therein was discovered. ADB SAFEGATE further reserves the right to require the return of such goods to establish any claim.

ADB SAFEGATE's obligation under this guarantee is limited to making repair or replacement within a reasonable time after receipt of such written notice and does not include any other costs such as the cost of removal of defective part, installation of repaired product, labor or consequential damages of any kind, the exclusive remedy being to require such new parts to be furnished.

ADB SAFEGATE's liability under no circumstances will exceed the contract price of goods claimed to be defective. Any returns under this guarantee are to be on a transportation charges prepaid basis. For products not manufactured by, but sold by ADB SAFEGATE, warranty is limited to that extended by the original manufacturer. This is ADB SAFEGATE's sole guarantee and warranty with respect to the goods; there are no express warranties or warranties of fitness for any particular purpose or any implied warranties of fitness for any particular purpose or any implied warranties other than those made expressly herein. All such warranties being expressly disclaimed.

Standard Products Guarantee

Products manufactured by ADB SAFEGATE are guaranteed against mechanical, electrical, and physical defects (excluding lamps) which may occur during proper and normal use for a period of two years from the date of ex-works delivery, and are guaranteed to be merchantable and fit for the ordinary purposes for which such products are made.



Note

See your sales order contract for a complete warranty description.

Replaced or repaired equipment under warranty falls into the warranty of the original delivery. No new warranty period is started for these replaced or repaired products.

FAA Certified products manufactured by ADB SAFEGATE

ADB SAFEGATE L858 Airfield Guidance Signs are warranted against mechanical and physical defects in design or manufacture for a period of 2 years from date of installation, per FAA AC 150/5345-44 (applicable edition).

ADB SAFEGATE LED products (with the exception of obstruction lighting) are warranted against electrical defects in design or manufacture of the LED or LED specific circuitry for a period of 4 years from date of installation, per FAA EB67 (applicable edition). These FAA certified constant current (series) powered LED products must be installed, interfaced and powered with and through products certified under the FAA Airfield Lighting Equipment Program (ALECP) to be included in this 4 (four) year warranty. This includes, but is not limited to, interface with products such as Base Cans, Isolation Transformers, Connectors, Wiring, and Constant Current Regulators.



Note

See your sales order contract for a complete warranty description.

Replaced or repaired equipment under warranty falls into the warranty of the original delivery. No new warranty period is started for these replaced or repaired products.

Liability



WARNING

Use of the equipment in ways other than described in the catalog leaflet and the manual may result in personal injury, death, or property and equipment damage. Use this equipment only as described in the manual.

ADB SAFEGATE cannot be held responsible for injuries or damages resulting from non-standard, unintended uses of its equipment. The equipment is designed and intended only for the purpose described in the manual. Uses not described in the manual are considered unintended uses and may result in serious personal injury, death or property damage.

Unintended uses, includes the following actions:

- Making changes to equipment that have not been recommended or described in this manual or using parts that are not genuine ADB SAFEGATE replacement parts or accessories.
- Failing to make sure that auxiliary equipment complies with approval agency requirements, local codes, and all applicable safety standards if not in contradiction with the general rules.
- Using materials or auxiliary equipment that are inappropriate or incompatible with your ADB SAFEGATE equipment.
- Allowing unskilled personnel to perform any task on or with the equipment.

© ADB SAFEGATE BV

This manual or parts thereof may not be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, nor otherwise, without ADB SAFEGATE BV's prior written consent.


This manual could contain technical inaccuracies or typographical errors. ADB SAFEGATE BV reserves the right to revise this manual from time to time in the contents thereof without obligation of ADB SAFEGATE BV to notify any person of such revision or change. Details and values given in this manual are average values and have been compiled with care. They are not binding, however, and ADB SAFEGATE BV disclaims any liability for damages or detriments suffered as a result of reliance on the information given herein or the use of products, processes or equipment to which this manual refers. No warranty is made that the use of the information or of the products, processes or equipment to which this manual refers will not infringe any third party's patents or rights. The information given does not release the buyer from making their own experiments and tests.

TABLE OF CONTENTS

1.0 Uses (TC-SB)	1
2.0 Spare Parts	3
2.1 Spare Parts (TC)	3
2.2 Spare Parts (ICAO SB)	5
2.3 Spare Parts (FAA SB)	7
A.0 SUPPORT	9
A.1 ADB SAFEGATE Website	9
A.2 Recycling	10
A.2.1 Local Authority Recycling	10
A.2.2 ADB SAFEGATE Recycling	10

1.0 Uses (TC-SB)

 - | | |
|-------------|---|
| | <ul style="list-style-type: none"> • Taxiway centerline |
| ICAO | <ul style="list-style-type: none"> • Lead-on/exit taxiway • Intermediate holding position |
| FAA | <ul style="list-style-type: none"> • Taxiway centerline L-852C(L), L-852D(L), L-852K(L) |

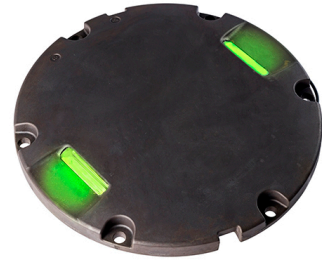

- | | |
|-------------|--|
| FAA | <ul style="list-style-type: none"> • Stop bar L-852S(L) |
| ICAO | <ul style="list-style-type: none"> • Stop bar |



2.0 Spare Parts


2.1 Spare Parts (TC)



Note

Contact ADB SAFEGATE for assistance with ordering spare parts, www.adbsafegate.com.

Description		Quantity per		Order code
		fitting	order	
1a	Top plate bidirectional straight	1	1	SGE.SP17107
1b	Top plate unidirectional straight	1	1	SGE.SP17108
2a	Prism incl. prism gasket, protection plate and prism holder	1	2	SGE.SP17114
2b	Reinforced prism incl. prism gasket, protection plate and prism holder	1	2	SGE.SP17115
3	LED assembly incl. reflector, LED holder and cable			
3a	Curved Left Blue	1	1	SGE.SP19156
3b	Curved Left F-Green L-852K(L)	1	1	SGE.SP19153
3c	Curved Left G-Green	1	1	SGE.SP19152
3d	Curved Left Red	1	1	SGE.SP19155
3e	Curved Left Yellow L-852K(L)	1	1	SGE.SP19154
3f	Curved Right Blue	1	1	SGE.SP19161
3g	Curved Right F-Green L-852K(L)	1	1	SGE.SP19158
3h	Curved Right G-Green	1	1	SGE.SP19157
3i	Curved Right Red	1	1	SGE.SP19160
3j	Curved Right Yellow L-852K(L)	1	1	SGE.SP19159
3k	Narrow F-Green L-852C(L)	1	1	SGE.SP18929
3l	Narrow G-Green	1	1	SGE.SP18928
3m	Narrow Yellow L-852C(L)	1	1	SGE.SP18927
3n	Wide Blue	1	1	SGE.SP19151
3o	Wide F-Green	1	1	SGE.SP19148
3p	Wide G-Green	1	1	SGE.SP19147
3q	Wide Red	1	1	SGE.SP19150
3r	Wide Yellow	1	1	SGE.SP19149
3s	L-852D(L) Yellow	1	1	SGE.SP18952
3t	L-852D(L) F-Green	1	1	SGE.SP18953
3u	L-852D(L) Red	1	1	SGE.SP19162
4	LED Cable 180 mm	1	10	SGE.SP18650
5	Bottom cover gasket	1	10	SGE.SP17116
6a	Bottom cover assembly incl. RELIANCE IQ converter and secondary cable	1	1	SGE.SP17117
6b	Bottom cover assembly incl. 1 connector RELIANCE converter and secondary cable	1	1	SGE.SP18059

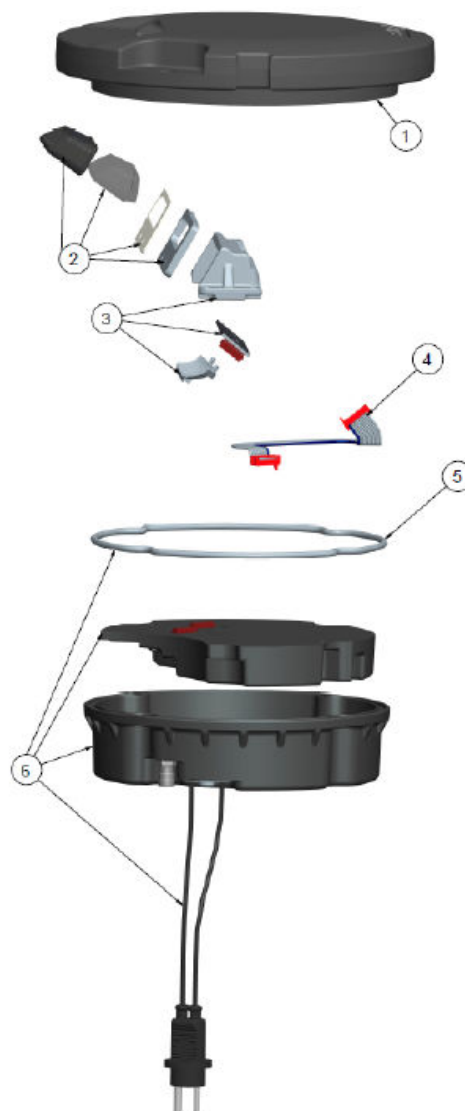 

Description		Quantity per		Order code
		fitting	order	
6c	Bottom cover assembly incl. 2 connector RELIANCE converter FAIL-OPEN and secondary cable	1	1	SGE.SP19316
6d	Bottom cover assembly incl. 1 connector RELIANCE converter NON-MON and secondary cable	1	1	SP013101
6e	Bottom cover assembly incl. 2 connector RELIANCE converter NON-MON and secondary cable	1	1	SP013102
7	Fuse resistor (only for lights with monitoring option), pack of 20	1-2	20	6132.00.250



Note

All screws for fastening are included.



Note

Component availability or design may be subject to change due to unforeseen circumstances. This document is subject to change or new information from ADB SAFEGATE, as and when available or if required, with reservation for error or price changes.

For more information contact ADB SAFEGATE, see www.adbsafegate.com.


2.2 Spare Parts (ICAO SB)



Note

Contact ADB SAFEGATE for assistance with ordering spare parts, www.adbsafegate.com.

Description	Quantity per		Order code
	fitting	order	
1a Top plate bidirectional straight	1	1	SGE.SP17107
1b Top plate unidirectional straight	1	1	SGE.SP17108
2a Prism incl. prism gasket, protection plate and prism holder	1	2	SGE.SP17114
2b Reinforced prism incl. prism gasket, protection plate and prism holder	1	2	SGE.SP17115
3 LED assembly incl. reflector, LED holder and cable			
3a Curved Left Red	1	1	SGE.SP19155
3b Curved Right Red	1	1	SGE.SP19160
3c Wide Red	1	1	SGE.SP19150
4 LED Cable 180 mm	1	10	SGE.SP18650
5 Bottom cover gasket	1	10	SGE.SP17116
6a Bottom cover assembly incl. RELIANCE IQ converter and secondary cable	1	1	SGE.SP17117
6b Bottom cover assembly incl. 1 connector RELIANCE converter FAIL-OPEN and secondary cable	1	1	SGE.SP18059
6c Bottom cover assembly incl. 2 connector RELIANCE converter FAIL-OPEN and secondary cable	1	1	SGE.SP19316
6d Bottom cover assembly incl. 1 connector RELIANCE converter NON-MON and secondary cable	1	1	SP013101
6e Bottom cover assembly incl. 2 connector RELIANCE converter NON-MON and secondary cable	1	1	SP013102
7 Fuse resistor (only for lights with monitoring option), pack of 20	1-2	20	6132.00.250

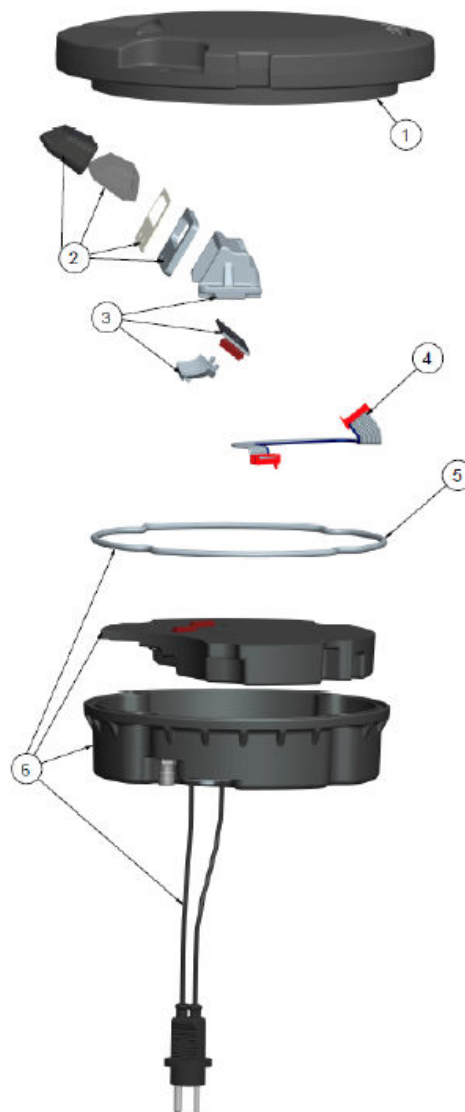 



Note

All screws for fastening are included.



Note

Component availability or design may be subject to change due to unforeseen circumstances. This document is subject to change or new information from ADB SAFEGATE, as and when available or if required, with reservation for error or price changes.

For more information contact ADB SAFEGATE, see www.adbsafegate.com.


2.3 Spare Parts (FAA SB)



Note

Contact ADB SAFEGATE for assistance with ordering spare parts, www.adbsafegate.com.

Description	Quantity per		Order code
	fitting	order	
1 Top plate Unidirectional	1	1	SGE.SP17108
2a Prism incl. gasket, protection plate and prism holder	1	2	SGE.SP17114
2b Reinforced prism incl. gasket, protection plate and prism holder	1	2	SGE.SP17115
3 LED assembly incl. reflector, LED holder and cable, Red	1	1	SGE.SP18600
4 LED cable 180 mm	1	10	SGE.SP18650
5 Bottom cover gasket	1	10	SGE.SP17116
6a Bottom cover assembly incl. RELIANCE IQ converter and secondary cable	1	1	SGE.SP17117
6b Bottom cover assembly incl. 1 connector RELIANCE converter FAIL-OPEN and secondary cable	1	1	SGE.SP18059
6c Bottom cover assembly incl. 1 connector RELIANCE converter NON-MON and secondary cable	1	1	SP.013101
7 Fuse resistor (only for lights with monitoring option), pack of 20	1-2	20	6132.00.250

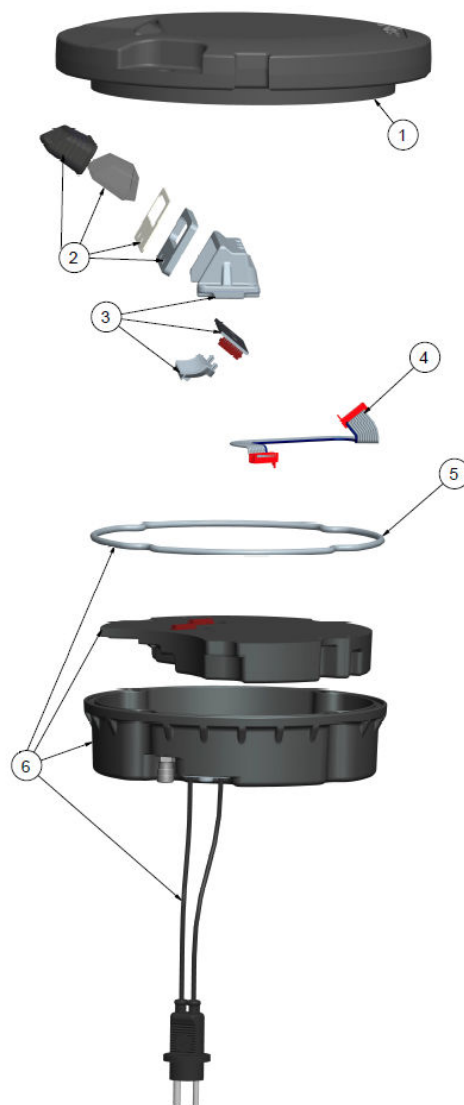 



Note

All screws for fastening are included.

Component availability or design may be subject to change due to unforeseen circumstances. This document is subject to change or new information from ADB SAFEGATE, as and when available or if required, with reservation for error or price changes.

For more information contact ADB SAFEGATE, see www.adbsafegate.com.

Appendix A: SUPPORT

Our experienced engineers are available for support and service at all times, 24 hour/7 days a week. They are part of a dynamic organization making sure the entire ADB SAFEGATE is committed to minimal disturbance for airport operations.

ADB SAFEGATE Support

Live Technical Support - Americas

If at any time you have a question or concern about your product, just contact ADB SAFEGATE's technical service department. Trained in all areas of system issues, troubleshooting, quality control and technical assistance, our highly experienced Technical support specialists are available 24 hours a day, seven days a week to provide assistance over the phone.

ADB SAFEGATE **Americas Technical Service & Support (US & Canada): +1-800-545-4157**

 
ADB SAFEGATE Americas Technical Service & Support (International): +1-614-861-1304

During regular business hours, you can also Chat with a Service Technician. We look forward to working with you!

Before You Call

When you have an airfield lighting or system control system problem it is our goal to support airfield maintenance staff as quickly as possible. To support this effort we ask that you have the following information ready before calling.

- The *airport code*
- If not with an airport, then company name (prefer customer id number)
- Contact phone number and email address
- Product with part number preferable or product number
- Have you reviewed the product's manual and troubleshooting guide
- Do you have a *True RMS* meter available (and any other necessary tools)
- Be located with the product ready to troubleshoot

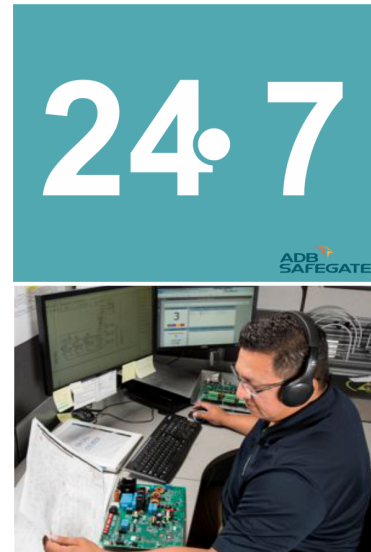

Note

For more information, see www.adbsafegate.com, or contact ADB SAFEGATE Support via email at support@adbsafegate.com or

Brussels: +32 2 722 17 11

Rest of Europe: +46 (0) 40 699 17 40

Americas: +1 614 861 1304. Press 3 for technical service or press 4 for sales support.

China: +86 (10) 8476 0106

A.1 ADB SAFEGATE Website

The ADB SAFEGATE website, www.adbsafegate.com, offers information regarding our airport solutions, products, company, news, links, downloads, references, contacts and more.

A.2 Recycling

A.2.1 Local Authority Recycling

The disposal of ADB SAFEGATE products is to be made at an applicable collection point for the recycling of electrical and electronic equipment. The correct disposal of equipment prevents any potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. The recycling of materials helps to conserve natural resources. For more detailed information about recycling of products, contact your local authority city office.

A.2.2 ADB SAFEGATE Recycling

ADB SAFEGATE is fully committed to environmentally-conscious manufacturing with strict monitoring of our own processes as well as supplier components and sub-contractor operations. ADB SAFEGATE offers a recycling program for our products to all customers worldwide, whether or not the products were sold within the EU.

ADB SAFEGATE products and/or specific electrical and electronic component parts which are fully removed/separated from any customer equipment and returned will be accepted for our recycling program.

All items returned must be clearly labeled as follows:

- For *ROHS/WEEE* Recycling
- Sender contact information (Name, Business Address, Phone number).
- Main Unit Serial Number.

ADB SAFEGATE will continue to monitor and update according for any future requirements for *EU directives* as and when *EU member states* implement new *regulations* and or *amendments*. It is our aim to maintain our *compliance plan* and assist our customers.

Company Addresses

ADB SAFEGATE	ADB SAFEGATE, Belgium: Leuvensesteenweg 585, B-1930 Zaventem Belgium
Contact: Tel.: +32 2 722 17 11, Fax: +32 2 722 17 64	Email: marketing@adbsafegate.com Internet: www.adbsafegate.com
Americas LLC	ADB SAFEGATE, Americas: 977 Gahanna Parkway, Columbus, OH 43230 USA
Contact: Tel.: +1 (614) 861 1304, Fax: +1 (614) 864 2069	Email: sales.us@adbsafegate.com Internet: www.adbsafegate.com
ADB SAFEGATE Sweden AB	ADB SAFEGATE, Sweden: Djurhagegatan 19 SE-213 76 Malmö Sweden
Contact: Tel.: +46 (0)40 699 17 00, Fax: +46 (0)40 699 17 30	Email: marketing@adbsafegate.com Internet: www.adbsafegate.com
ADB SAFEGATE Airfield Technologies Ltd. China	ADB SAFEGATE, China: Unit 603, D Block, CAMIC International Convention Center, No 3, Hua Jia Di East road, ChaoYang district, Beijing 100102 P.R. China
Contact: Tel.: +86 (10) 8476 0106, Fax: +86 (10) 8476 0090	Email: china@safegate.com Internet: www.adbsafegate.com
ADB SAFEGATE Germany GmbH	ADB SAFEGATE Germany GmbH, Mannheim: Konrad-Zuse-Ring 6, D-68163 Mannheim Germany
Contact: Tel.: +49 (621) 87 55 76-0, Fax: +49 (621) 87 55 76-55	Email: marketing@adbsafegate.com Internet: www.adbsafegate.com



**Powering Your Airport Performance
from Approach to Departure**

adbsafegate.com

Copyright © ADB SAFEGATE, all rights reserved

