RELIANCE

USB Dongle ADA004 RS232



Uses

The ADA 004-RS232 is a RS232 ro USB serial converter.

Supported Functions

- USB to serial converter (EIA-232-F, RS232)
- Native USB supported by ADB SAFEGATE's lucDMC
- Native USB supported by ADB SAFEGATE's ACMS HMI
- (Optional) ADB SAFEGATE License Dongle
- (Optional) ADB SAFEGATE License Cube

Details

The RJ45 pin layout is compatible to the maintenance interface (RJ45) of all ADB SAFEGATE products, CAT 6 twisted pair cable for Ethernet required.

VCP functionality is supported by Windows 10. Prior windows versions require an installation of a ADA004 VCP device driver, available separately.

Technical Data

| Connector USB | USB C (USB C to USB A cable included) |
|---------------------------|---------------------------------------|
| Connector RS485 | RJ45 |
| Speed | Up to 250 kbps |
| Operating temperature | -5 °C to +50 °C |
| Storage temperature | -25 °C to +55 °C |
| Humidity | 95% or less (non-condensating) |
| Protection class | IP30 |
| Isolation voltage | +/- 50 V |
| Power | Powered via USB port |
| Dimensions (L x W x H) | 49 x 38 x 28 mm |
| Weight | Approx. 25 g |

RS233 connections

| Pin 1 | TXD |
|-------------------|-----|
| Pin 2 | RXD |
| Pin 6 | GND |
| Pin 3, 4, 5, 7, 8 | NC |

Note: All pins are insulated.

Recommended RJ45 Adapter

| Type 1 | Delock No.: 65527 |
|--------|-------------------|
| Type 3 | Delock No.: 6538 |

Note: Both standard types are available in the open market.

Ordering Code

ADA 004-RS232 (USB cable included)

Connection Diagram



