



L-858 AGSF
Incandescent Airfield Guidance Signs FAA

Spare Parts

SP_2040, Rev. A, 2020/09/16


**ADB
SAFEGATE**

A.0 Disclaimer / Standard Warranty

CE certification

The equipment listed as CE certified means that the product complies with the essential requirements concerning safety and hygiene. The European directives that have been taken into consideration in the design are available on written request to ADB SAFEGATE.

ETL certification

The equipment listed as ETL certified means that the product complies with the essential requirements concerning safety and FAA Airfield regulations. The FAA directives that have been taken into consideration in the design are available on written request to ADB SAFEGATE.

All Products Guarantee

ADB SAFEGATE will correct by repair or replacement per the applicable guarantee above, at its option, equipment or parts which fail because of mechanical, electrical or physical defects, provided that the goods have been properly handled and stored prior to installation, properly installed and properly operated after installation, and provided further that Buyer gives ADB SAFEGATE written notice of such defects after delivery of the goods to Buyer. Refer to the Safety section for more information on Material Handling Precautions and Storage precautions that must be followed.

ADB SAFEGATE reserves the right to examine goods upon which a claim is made. Said goods must be presented in the same condition as when the defect therein was discovered. ADB SAFEGATE further reserves the right to require the return of such goods to establish any claim.

ADB SAFEGATE's obligation under this guarantee is limited to making repair or replacement within a reasonable time after receipt of such written notice and does not include any other costs such as the cost of removal of defective part, installation of repaired product, labor or consequential damages of any kind, the exclusive remedy being to require such new parts to be furnished.

ADB SAFEGATE's liability under no circumstances will exceed the contract price of goods claimed to be defective. Any returns under this guarantee are to be on a transportation charges prepaid basis. For products not manufactured by, but sold by ADB SAFEGATE, warranty is limited to that extended by the original manufacturer. This is ADB SAFEGATE's sole guarantee and warranty with respect to the goods; there are no express warranties or warranties of fitness for any particular purpose or any implied warranties of fitness for any particular purpose or any implied warranties other than those made expressly herein. All such warranties being expressly disclaimed.

Standard Products Guarantee

Products of ADB SAFEGATE manufacture are guaranteed against mechanical, electrical, and physical defects (excluding lamps) which may occur during proper and normal use for a period of two years from the date of ex-works delivery, and are guaranteed to be merchantable and fit for the ordinary purposes for which such products are made.



Note

See your sales order contract for a complete warranty description.

FAA Certified product installed in the United States and purchased or funded with monies through the Airport Improvement Program (AIP) installations guarantee

ADB SAFEGATE L858 Airfield Guidance Signs are warranted against mechanical and physical defects in design or manufacture for a period of 2 years from date of installation, per FAA AC 150/5345-44 (applicable edition).

ADB SAFEGATE L858(L) Airfield Guidance Signs are warranted against electrical defects in design or manufacture of the LED or LED specific circuitry for a period of 4 years from date of installation, per FAA EB67 (applicable edition).

ADB SAFEGATE LED light fixtures (with the exception of obstruction lighting) are warranted against electrical defects in design or manufacture of the LED or LED specific circuitry for a period of 4 years from date of installation, per FAA EB67 (applicable edition).

**Note**

See your sales order contract for a complete warranty description.

Liability

**WARNING**

Use of the equipment in ways other than described in the catalog leaflet and the manual may result in personal injury, death, or property and equipment damage. Use this equipment only as described in the manual.

ADB SAFEGATE cannot be held responsible for injuries or damages resulting from non-standard, unintended uses of its equipment. The equipment is designed and intended only for the purpose described in the manual. Uses not described in the manual are considered unintended uses and may result in serious personal injury, death or property damage.

Unintended uses, includes the following actions:

- Making changes to equipment that have not been recommended or described in this manual or using parts that are not genuine ADB SAFEGATE replacement parts or accessories.
- Failing to make sure that auxiliary equipment complies with approval agency requirements, local codes, and all applicable safety standards if not in contradiction with the general rules.
- Using materials or auxiliary equipment that are inappropriate or incompatible with your ADB SAFEGATE equipment.
- Allowing unskilled personnel to perform any task on or with the equipment.

© ADB SAFEGATE BV

This manual or parts thereof may not be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, nor otherwise, without ADB SAFEGATE BV's prior written consent.

This manual could contain technical inaccuracies or typographical errors. ADB SAFEGATE BV reserves the right to revise this manual from time to time in the contents thereof without obligation of ADB SAFEGATE BV to notify any person of such revision or change. Details and values given in this manual are average values and have been compiled with care. They are not binding, however, and ADB SAFEGATE BV disclaims any liability for damages or detriments suffered as a result of reliance on the information given herein or the use of products, processes or equipment to which this manual refers. No warranty is made that the use of the information or of the products, processes or equipment to which this manual refers will not infringe any third party's patents or rights. The information given does not release the buyer from making their own experiments and tests.

TABLE OF CONTENTS

1.0 Safety	1
1.1 Safety Messages	1
1.1.1 Introduction to Safety	2
1.1.2 Intended Use	2
1.1.3 Material Handling Precautions: Storage	3
2.0 Halogen Signs	5
2.1 FAA Sign Introduction	5
2.2 FAA Incandescent Airfield Guidance Sign	6
3.0 Halogen Sign Parts	11
3.1 Spare Parts	13
A.0 SUPPORT	15
A.1 ADB SAFEGATE Website	15
A.2 Recycling	16
A.2.1 Local Authority Recycling	16
A.2.2 ADB SAFEGATE Recycling	16

List of Figures

Figure 1: L-858 Taxiway and Runway Sign (1-Module)	5
Figure 2: Halogen Sign Parts Diagram (high wind shown)	13

List of Tables

Table 1: L-858 Taxiway and Runway Signs	5
Table 2: Spare Parts	14

1.0 Safety

Introduction to Safety

This section contains general safety instructions for installing and using ADB SAFEGATE equipment. Some safety instructions may not apply to the equipment in this manual. Task- and equipment-specific warnings are included in other sections of this manual where appropriate.

1.1 Safety Messages

HAZARD Icons used in the manual

For all HAZARD symbols in use, see the Safety section. All symbols must comply with ISO and ANSI standards.

Carefully read and observe all safety instructions in this manual, which alert you to safety hazards and conditions that may result in personal injury, death or property and equipment damage and are accompanied by the symbol shown below.



WARNING

Failure to observe a warning may result in personal injury, death or equipment damage.



DANGER - Risk of electrical shock or ARC FLASH

Disconnect equipment from line voltage. Failure to observe this warning may result in personal injury, death, or equipment damage. ARC Flash may cause blindness, severe burns or death.



WARNING - Wear personal protective equipment

Failure to observe may result in serious injury.



WARNING - Do not touch

Failure to observe this warning may result in personal injury, death, or equipment damage.



CAUTION

Failure to observe a caution may result in equipment damage.

Qualified Personnel



Important Information

The term **qualified personnel** is defined here as individuals who thoroughly understand the equipment and its safe operation, maintenance and repair. Qualified personnel are physically capable of performing the required tasks, familiar with all relevant safety rules and regulations and have been trained to safely install, operate, maintain and repair the equipment. It is the responsibility of the company operating this equipment to ensure that its personnel meet these requirements.

Always use required personal protective equipment (PPE) and follow safe electrical work practice.

1.1.1 Introduction to Safety



CAUTION

Unsafe Equipment Use

This equipment may contain electrostatic devices, hazardous voltages and sharp edges on components

- Read installation instructions in their entirety before starting installation.
- Become familiar with the general safety instructions in this section of the manual before installing, operating, maintaining or repairing this equipment.
- Read and carefully follow the instructions throughout this manual for performing specific tasks and working with specific equipment.
- Make this manual available to personnel installing, operating, maintaining or repairing this equipment.
- Follow all applicable safety procedures required by your company, industry standards and government or other regulatory agencies.
- Install all electrical connections to local code.
- Use only electrical wire of sufficient gauge and insulation to handle the rated current demand. All wiring must meet local codes.
- Route electrical wiring along a protected path. Make sure they will not be damaged by moving equipment.
- Protect components from damage, wear, and harsh environment conditions.
- Allow ample room for maintenance, panel accessibility, and cover removal.
- Protect equipment with safety devices as specified by applicable safety regulations
- If safety devices must be removed for installation, install them immediately after the work is completed and check them for proper functioning prior to returning power to the circuit.

Failure to follow this instruction can result in serious injury or equipment damage

Additional Reference Materials



Important Information

- IEC - International Standards and Conformity Assessment for all electrical, electronic and related technologies.
- IEC 60364 - Electrical Installations in Buildings.
- FAA Advisory: AC 150/5340-26 (current edition), Maintenance of Airport Visual Aid Facilities.
- Maintenance personnel must refer to the maintenance procedure described in the ICAO Airport Services Manual, Part 9.
- ANSI/NFPA 79, Electrical Standards for Metalworking Machine Tools.
- National and local electrical codes and standards.

1.1.2 Intended Use



CAUTION

Use this equipment as intended by the manufacturer

This equipment is designed to perform a specific function, do not use this equipment for other purposes

- Using this equipment in ways other than described in this manual may result in personal injury, death or property and equipment damage. Use this equipment only as described in this manual.

Failure to follow this instruction can result in serious injury or equipment damage

1.1.3 Material Handling Precautions: Storage



CAUTION

Improper Storage


Store this equipment properly

- If equipment is to be stored prior to installation, it must be protected from the weather and kept free of condensation and dust.

Failure to follow this instruction can result in equipment damage

2.0 Halogen Signs

L-858 Taxiway & Runway Signs installation and maintenance manual.

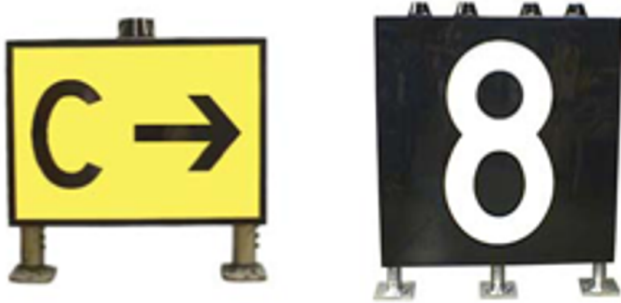

2.1 FAA Sign Introduction

See [Figure 1](#) . This section describes the L-858 standard VA and low VA, taxiway and runway signs referred to in [Table 1](#) .

Figure 1: L-858 Taxiway and Runway Sign (1-Module)

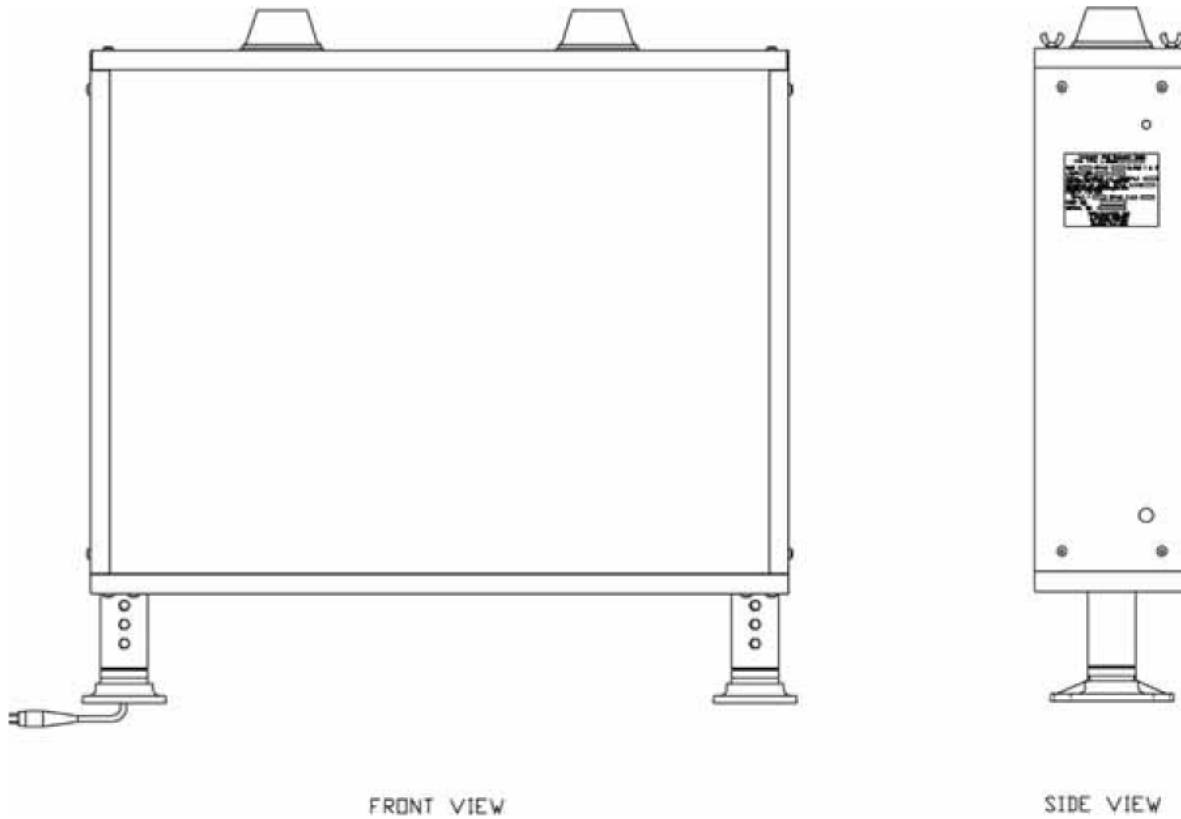


Table 1: L-858 Taxiway and Runway Signs

Sign Type	Purpose	Legend Color	Background Color
L-858Y	Taxiway, Direction, Destination, & Boundary	Black	Yellow
L-858R	Mandatory Sign	White	Red
L-858B	Runway Distance Remaining	White	Black
L-858L	Runway or Taxiway Location	Yellow	Black

The ADB Safegate L-858 taxiway and runway signs are used on airports:

- To guide pilots of aircraft to destinations in accordance with FAA AC 150/5340-18.
- To identify holding positions, intersecting runways and taxiways.
- To prohibit entry into a particular area.
- To provide runway distance remaining information to pilots during takeoff and landing operations.

The basic sign module accommodates two characters and can be single- or double-faced. The signs are available in all FAA classifications of various lengths depending on the number of modules combined. Each sign is furnished complete with lamp(s), connecting leads, legend panels, brightness control transformer(s), and mounting assemblies designed for installation on concrete pads.

2.2 FAA Incandescent Airfield Guidance Sign

Compliance with Standards

FAA: L-858Y, L-858R, L-858L, and L-858B
AC 150/5345-44 (Current Edition). ETL Certified.

Uses

FAA L-858Y Direction, Destination, and Boundary (Informational Sign)

FAA L-858R Mandatory Sign

FAA L-858L Runway/Taxiway Location Sign: These signs are designed to guide pilots to a particular point on the field, identify holding positions, identify taxiway and runway intersections, and prohibit aircraft entry into designated areas.

FAA L-858B Runway Distance Remaining Sign: The L-858B is used at 1,000-foot intervals adjacent to the runway edge in order to provide runway distance remaining information to pilots during takeoff and landing operations.

Sign Legends

Type	Purpose	Legend Color	Background Color
L-858Y	Direction, Destination & Boundary	Black	Yellow
L-858R	Mandatory Sign	White with Black Outline	Red
L-858L	Runway/Taxiway Location	Yellow	Black
L-858B	Runway Distance Remaining	White	Black

Operating Conditions

Class	Operating Temperature Range	Humidity	Wind Velocities *
2	-40 °F to +131 °F (-40 °C to +55 °C)	0 to 100%	225 mph

Notes

* ADB Safegate Mode 2 signs withstand wind velocities up to 225 mph. ADB Safegate Mode 3 (high wind) signs withstand wind velocities up to 327 mph.

Power Supply

Informational, mandatory and location signs are available in three sizes. The runway distance remaining signs are available in two sizes. The signs are connected to a series circuit using the appropriately-sized 50 or 60 Hz L-830 isolation transformer(s).

Sign Size No.	Quartz Halogen, 6.6 A, 48 W Lamps Required
1	1 per Module
2	2 per Module
3	2 per Module
4	4 only
5	2 only

Dimensions

Sign Heights						
Type	Sign Size No.	Sign Face Height in (cm)	Legend Height in (cm)	Sign Style No.	Sign Class No.	Overall Mounting Height in (cm)
L-858Y/R/L	1	18	12	2,3,5	1,2	29.7
	1	(45.7)	(30.5)	2,3,5	1,2	(75.5)
L-858Y/R/L	2	24	15	2,3,5	1,2	35.7
	2	(61)	(38.1)	2,3,5	1,2	(90.8)
L-858Y/R/L	3	30	18	2,3,5	1,2	41.7
	3	(76.2)	(45.7)	2,3,5	1,2	(106)
L-858B	4	48	40	2,3,5	1,2	58.2
	4	122)	(101.6)	2,3,5	1,2	(147.8)
L-858B	5	30	25	2,3,5	1,2	41.7
	5	(76.2)	(63.5)	2,3,5	1,2	(106)

Sign Lengths - Inches (Centimeters)				
Size No.	1 Module	2 Module	3 Module	4 Module
1	29.4 (75)	58.6 (149)	87.9 (223)	117.2 (298)
2	35.9 (91)	71.6 (182)	107.4 (273)	143.2 (364)
3	42.4 (108)	84.6 (215)	126.9 (323)	169.2 (430)
4	47.9 (122)	N/A	N/A	N/A
5	42.4 (108)	N/A	N/A	N/A

Note: Sign depth is 9.39 in (23.85 cm).

Sign Load & Transformer Requirements

In the table below, the number for the total VA load imposed on the CCR represents the actual load imposed on the regulator and accounts for power factor and load imposed by the L-830 transformer.

Low VA Halogen Lamps					
Sign Size	No. of Modules	Transformer	No. of Lamps	Sign Power Factor	Volt Amp VA Load
48 Watt Lamps — Style 2, 3-Step Signs (4.8 - 6.6 A)					
1	1	100 W	1	0.98	106
1	2	200 W	2	0.99	155
1	3	300 W	3	0.98	202
1	4	300 W	4	0.99	250
2, 3	1	200 W	2	0.99	155
2, 3	2	300 W	4	0.99	250
2, 3	3	500 W	6	0.98	340
2, 3	4	300 W (2)	8	0.97	450
4	1	300 W	4	0.99	250
5	1	200 W	2	0.99	155

Low VA Halogen Lamps					
Sign Size	No. of Modules	Transformer	No. of Lamps	Sign Power Factor	Volt Amp VA Load
48 Watt Lamps — Style 3, 5-Step Signs (2.8 - 6.6 A)					
1	1	200 W	1	0.97	105
1	2	300 W	2	0.98	145
1	3	500 W	3	0.98	190
1	4	500 W	4	0.98	233
2, 3	1	300 W	2	0.98	145
2, 3	2	500 W	4	0.98	233
2, 3	3	500 & 300 W	6	0.98	350
2, 3	4	500 W (2)	8	0.97	440
4	1	500 W	4	0.98	233
5	1	300 W	2	0.98	145

Low VA Halogen Lamps					
Sign Size	No. of Modules	Transformer	No. of Lamps	Sign Power Factor	Volt Amp VA Load
48 Watt Lamps — Style 5 Signs (5.5 A)					
1	1	45 W*	1	0.99	48
1	2	100W	2	0.99	96
1	3	200 W	3	0.99	144
1	4	200 W	4	0.99	192
2, 3	1	100 W	2	0.99	96

Low VA Halogen Lamps

Sign Size	No. of Modules	Trans-former	No. of Lamps	Sign Power Factor	Volt Amp VA Load
2, 3	2	200 W	4	0.99	192
2, 3	300 W	3	6	1.00	288
2, 3	4	500 W	8	0.98	384
4	1	200 W	4	0.99	192
5	1	100 W	2	0.99	96

Notes

* Substitute 65 W transformer when implementing an LED retrofit kit.

Construction

Corrosion-resistant sign construction requires minimal maintenance.

- Aluminum housing
- Acrylic sign legend panels
- Stainless steel hardware
- Retroreflective sheeting
- Translucent plastic panel dividers used between multi-module legend panels

L-858 Sign LED Retrofit Kits for ADB Safegate Signs

Application

A retrofit kit is available to convert any existing ADB SAFEGATE FAA incandescent tungsten-halogen or fluorescent sign to an LED light source. The kit is available for all FAA Types: L-858Y, L-858R, L-858L and L-858B; all Sizes: Size 1 through 5; and all module lengths: up to 4 modules. Retrofitting a sign is fast and easy. It typically takes 20 minutes to retrofit a 2-module sign. The retrofit process converts the sign to the same type as an existing ADB SAFEGATE ETL-certified sign.

Reduced Maintenance Costs

An LED sign virtually eliminates runway shutdowns due to the long life LED light source. It eliminates relamping expenses and reduces ongoing maintenance costs. The LED optical design also creates a highly uniform distribution of light, eliminating hot spots and shadows. Also, the sign provides for improved safety because there is only a low, regulated DC voltage inside the sign.

Energy Savings

An LED sign provides greatly reduced energy consumption compared to existing types of signs. See table below for more information.

The LED sign operates on ferroresonant or thyristor CCRs that are designed in compliance with FAA requirements. The sign electronics are designed to operate on all steps of a 3-step or 5-step CCR and on a 5.5 A CCR.

See LED sign load chart on DS-3006: AGSF-L for sign loading and optimum sign transformer size. Note that the existing larger size transformer, if present, can be reused. Ask for Service Bulletin ALN158 for details on how to retrofit the sign.

LED Sign Retrofit Kit

Size

- 1 = Size 1
- 2 = Size 2
- 3 = Size 3
- 4 = Size 4
- 5 = Size 5

Number of Modules

- 1 = 1 module
- 2 = 2 modules
- 3 = 3 modules
- 4 = 4 modules

94A0628 - X X 0



Packaging Data

Signs are shipped with L-823 cord set(s), frangible couplings, and floor flanges – ready for installation.

Description	Gross Weight		Carton Dimensions	
	(lb)	(kg)	(in)	(cm)
Size 1, Module 1	46	21	34 × 34 × 13	87 × 86.4 × 33
Size 1, Module 2	78	35	34 × 63 × 13	87 × 160 × 33
Size 1, Module 3	115	52	34 × 92 × 13	87 × 234 × 33
Size 1, Module 4	169	77	34 × 121 × 13	87 × 307 × 33
Size 1, Module 2	71	32	40 × 40 × 13	102 × 102 × 33
Size 2, Module 2	104	47	40 × 76 × 13	102 × 193 × 33
Size 2, Module 3	153	70	40 × 112 × 13	102 × 285 × 33
Size 2, Module 4	220 ¹	100 ¹	40 × 147 × 13	102 × 374 × 33
Size 3, Module 1	81	37	46 × 46 × 13	117 × 117 × 33
Size 3, Module 2	131	60	46 × 89 × 13	117 × 226 × 33
Size 3, Module 3	199	90	46 × 131 × 13	117 × 333 × 33
Size 3, Module 4	252	114	46 × 173 × 13	117 × 440 × 33

¹ Estimated weight

3.0 Halogen Sign Parts

Ordering Code

Lamp Type

H = Halogen

W = High Wind/Halogen¹

Sign Size

1 = Size 1 (1 lamp per module)

2 = Size 2 (2 lamps per module)

3 = Size 3 (2 lamps per module)

4 = Size 4 (4 lamps only)

5 = Size 5 (2 lamps only)

Module

1 = 1 Module

2 = 2 Module

3 = 3 Module

4 = 4 Module

Style

1 = Low VA Halogen Style 2 & 3 (3- & 5-Step)

2 = Low VA Halogen Style 5 (5.5 A)

Face

1 = Single

2 = Double

Total Number of Panels:

X = To be determined by the Sales Department based on legend and module configurations.

Backup Lamps

1 = 48 W halogen without backup lamps

2 = 48 W halogen with backup lamps

Power

1 = Power through leg without ON/OFF switch

2 = Power through leg with ON/OFF switch

3 = Power through side without ON/OFF switch³

4 = Power through side with ON/OFF switch³

5 = Customer-provided entry without ON/OFF switch^{2,3}

6 = Customer-provided entry with ON/OFF switch^{2,3}

9 = Power through bottom without ON/OFF switch³

A = Power through bottom with ON/OFF switch³

Tether

0 = No tether³

1 = One tether on one end of sign

2 = Two tethers, one on each end

3 = One tether per leg

Lamps Out Indicator

0 = Without

1 = With

S X X X - X X X X X X

Sign Ordering Code Notes

• Customer to provide legend information and power connection side. It is important to match power cord exit location with legend side.

¹ Use high wind signs in locations where actual wind speed exceeds FAA specifications. High wind signs are tested to a minimum wind load of 327 mph as recommended by FAA technical paper DOT/FAA/AR-TN00/32: Evaluation of Wind-Loading on Airport Signs. High wind signs require four anchor bolts per floor flange except Size 1, which uses the standard 2-bolt foot.

² Cord set coiled up inside sign. Customer provides entry hole.

³ Not ETL Certified.

LED Sign Retrofit Kit

94A0628 - X X 0

Size

1 = Size 1

2 = Size 2

3 = Size 3

4 = Size 4

5 = Size 5

Number of Modules

1 = 1 module

2 = 2 modules

3 = 3 modules

4 = 4 modules

Legend Panel Replacement

44A6084 - X X X X

Size

- 1 = Size 1
- 2 = Size 2
- 3 = Size 3 and 5
- 4 = Size 4

Number of Modules

- 1 = 1 module
- 2 = 2 modules

Panel Type

- 1 = With legend (retroreflective)
- 2 = Black

Sign Type

- 0 = Standard
- 1 = Hi-Wind



Legend Panel Divider

44A6173 - X X X

Size

- 1 = Size 1
- 2 = Size 2
- 3 = Size 3 and 5

Paint Coverage


- A = Solid (black only)¹
- C = Clear (paint top only)

Paint Color

- R = Red
- Y = Yellow
- B = Black¹

Notes:

¹ For option A (solid), customer must select option B (black). Option C (clear) can be paired with either red or yellow.




Optional Lamps-Out Indicator Kit

94A0373

Note: Used to add lamps-out indicator on existing tungsten halogen signs.

FAA Halogen Sign

Figure 2: Halogen Sign Parts Diagram (high wind shown)

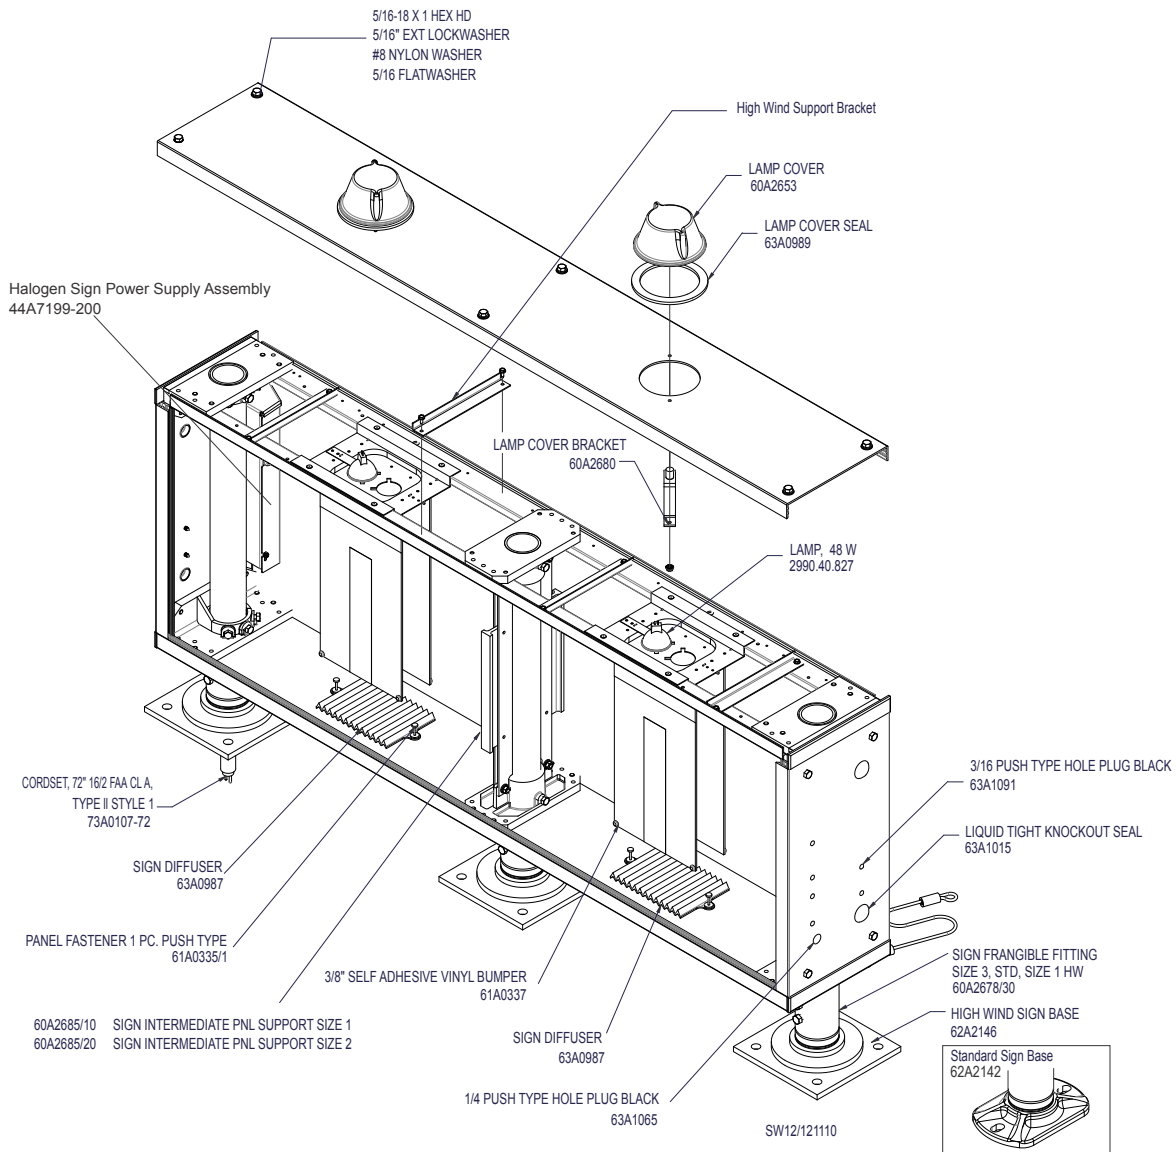

Note

If you have a Halogen Sign with the 44A6225/X top-mounted power supply, please see the manual 96A0286 on our Web site. If you wish to convert the old power supply (44A6225/X) to the new power supply (44A7199/200), please call your ADB Safegate representative.

When servicing a power supply for a halogen guidance sign, ADB Safegate recommends the sign be retrofitted to LED using an LED retrofit kit (94A0628-XX0).

3.1 Spare Parts

Create a sufficiently large stock of spare parts to maintain the Halogen Sign in the field. Consider acquiring approximately 10% spare final assemblies (with a minimum quantity of 1) for the total amount of equipment in the field. This allows for repairs to be made in the shop. Components that are more likely to need replacement, such as gaskets and PCB subassemblies should be stocked in smaller quantities. For the Halogen Sign it is highly recommended for larger installations, at least 10% of the total units installed.

For the Halogen Sign, see the table below for spares.

- Consider acquiring 10% spares for critical components noted as (A) in the table below.
If only a small number of units are installed, consider acquiring at least 1 of each of the components noted as (A) below.
- Also consider acquiring 1% spares for parts noted as (B) in the table below. If it is important to have a robust level of spare parts on hand, and only a small number of units are installed, consider acquiring 1 of each of the components noted as (B) below.

Table 2: Spare Parts

Part Number	Description	Location	Notes	Spares
44A7199/200	Halogen Sign Power Supply Assembly	Figure 2		A
60A2653	Lamp Cover	Figure 2		A
63A0989	Lamp Cover Seal	Figure 2		A
2990.40.827	48W Lamp	Figure 2		A
73A0107/72	Cordset 72"	Figure 2		A
62A2146	High-Wind Mounting Flange, 4-BOLT	Figure 2		B
62A2142	Standard Mounting Flange, 2-Bolt	Figure 2		B
60A2678/10	Frangible Coupling size 1 signs mode 2	Figure 2		B
60A2678/20	Frangible Coupling size 2 signs mode 2	Figure 2		B
60A2678/30	Frangible Coupling size 3 and size 5 signs mode 2	Figure 2		B
60A2678/40	Frangible Coupling size 4 signs mode 2	Figure 2		B
60A2678/11	Frangible Coupling size 1 signs mode 3	Figure 2		B
60A2678/21	Frangible Coupling size 2 signs mode 3	Figure 2		B
60A2678/31	Frangible Coupling size 3 signs mode 3	Figure 2		B
60A2678/41	Frangible Coupling size 4 signs mode 3	Figure 2		B
60A2678/50	Frangible Coupling size 5 signs mode 3	Figure 2		B

Appendix A: SUPPORT

Our experienced engineers are available for support and service at all times, 24 hour/7 days a week. They are part of a dynamic organization making sure the entire ADB SAFEGATE is committed to minimal disturbance for airport operations.

ADB SAFEGATE Support

Live Technical Support - Americas

If at any time you have a question or concern about your product, just contact ADB SAFEGATE's technical service department. Trained in all areas of system issues, troubleshooting, quality control and technical assistance, our highly experienced Technical support specialists are available 24 hours a day, seven days a week to provide assistance over the phone.

ADB SAFEGATE **Americas Technical Service & Support (US & Canada): +1-800-545-4157**


ADB SAFEGATE Americas Technical Service & Support (International): +1-614-861-1304

During regular business hours, you can also Chat with a Service Technician. We look forward to working with you!

Before You Call

When you have an airfield lighting or system control system problem it is our goal to support airfield maintenance staff as quickly as possible. To support this effort we ask that you have the following information ready before calling.

- The *airport code*
- If not with an airport, then company name (prefer customer id number)
- Contact phone number and email address
- Product with part number preferable or product number
- Have you reviewed the product's manual and troubleshooting guide
- Do you have a *True RMS* meter available (and any other necessary tools)
- Be located with the product ready to troubleshoot

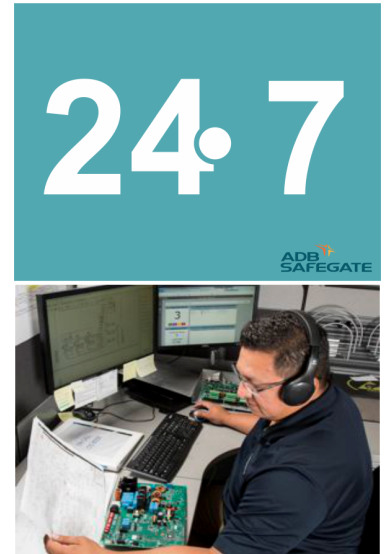

Note

For more information, see www.adbsafegate.com, or contact ADB SAFEGATE Support via email at support@adbsafegate.com or

Brussels: +32 2 722 17 11

Rest of Europe: +46 (0) 40 699 17 40

Americas: +1 614 861 1304. Press 3 for technical service or press 4 for sales support.

China: +86 (10) 8476 0106

A.1 ADB SAFEGATE Website

The ADB SAFEGATE website, www.adbsafegate.com, offers information regarding our airport solutions, products, company, news, links, downloads, references, contacts and more.

A.2 Recycling

A.2.1 Local Authority Recycling

The disposal of ADB SAFEGATE products is to be made at an applicable collection point for the recycling of electrical and electronic equipment. The correct disposal of equipment prevents any potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. The recycling of materials helps to conserve natural resources. For more detailed information about recycling of products, contact your local authority city office.

A.2.2 ADB SAFEGATE Recycling

ADB SAFEGATE is fully committed to environmentally-conscious manufacturing with strict monitoring of our own processes as well as supplier components and sub-contractor operations. ADB SAFEGATE offers a recycling program for our products to all customers worldwide, whether or not the products were sold within the EU.

ADB SAFEGATE products and/or specific electrical and electronic component parts which are fully removed/separated from any customer equipment and returned will be accepted for our recycling program.

All items returned must be clearly labeled as follows:

- For *ROHS/WEEE* Recycling
- Sender contact information (Name, Business Address, Phone number).
- Main Unit Serial Number.

ADB SAFEGATE will continue to monitor and update according for any future requirements for *EU directives* as and when *EU member states* implement new *regulations* and or *amendments*. It is our aim to maintain our *compliance plan* and assist our customers.

Company Addresses

ADB SAFEGATE	ADB SAFEGATE, Belgium: Leuvensesteenweg 585, B-1930 Zaventem Belgium
Contact: Tel.: +32 2 722 17 11, Fax: +32 2 722 17 64	Email: marketing@adbsafegate.com Internet: www.adbsafegate.com
Americas LLC	ADB SAFEGATE, Americas: 977 Gahanna Parkway, Columbus, OH 43230 USA
Contact: Tel.: +1 (614) 861 1304, Fax: +1 (614) 864 2069	Email: sales.us@adbsafegate.com Internet: www.adbsafegate.com
ADB SAFEGATE Sweden AB	ADB SAFEGATE, Sweden: Djurhagegatan 19 SE-213 76 Malmö Sweden
Contact: Tel.: +46 (0)40 699 17 00, Fax: +46 (0)40 699 17 30	Email: marketing@adbsafegate.com Internet: www.adbsafegate.com
ADB SAFEGATE Airfield Technologies Ltd. China	ADB SAFEGATE, China: Unit 603, D Block, CAMIC International Convention Center, No 3, Hua Jia Di East road, ChaoYang district, Beijing 100102 P.R. China
Contact: Tel.: +86 (10) 8476 0106, Fax: +86 (10) 8476 0090	Email: china@safegate.com Internet: www.adbsafegate.com
ADB SAFEGATE Germany GmbH	ADB SAFEGATE Germany GmbH, Mannheim: Konrad-Zuse-Ring 6, D-68163 Mannheim Germany
Contact: Tel.: +49 (621) 87 55 76-0, Fax: +49 (621) 87 55 76-55	Email: marketing@adbsafegate.com Internet: www.adbsafegate.com



Powering Your Airport Performance from Approach to Departure

adbsafegate.com

Copyright © ADB SAFEGATE, all rights reserved

